



Repair, Renovate and Revive Furniture Kit

- Complete kit for furniture repair around the home
- An ideal starter pack for beginners
- Helps you obtain professional and hardwearing finishes quickly
- Full instruction leaflet included
- Easy to use



Product use

Liberon Repair, Renovate and Revive Furniture Kit contains all you need to repair, renovate and revive small surface damage to the woodwork and furniture in your home. The kit enables you to remove white ring marks, sticky, built-up wax and spray polishes and to fill nail holes and deep scratches as well as removing superficial scratches from polished or varnished surfaces.

Removal of white marks caused by heat or water

On surfaces that are only waxed, simply clean the surfaces with Wax and Polish Remover and Ultra Fine Steel Wool (0000). Once clean the surface can be re-waxed with Black Bison Fine Paste Wax.

On hard surface finishes such as French polishes, lacquers and varnishes the Ring Remover will easily and effectively remove the white marks. Apply using a clean, lint-free cotton cloth and rub vigorously in a circular motion over the mark until it is removed. Buff with a clean, dry cotton cloth and wax or polish as normal.

How to disguise or remove superficial surface scratches

Many hard finishes such as French polishes or lacquers are prone to superficial scratches, which only show in a certain light. These can be either disguised or completely removed by waxing the surfaces with Black Bison Fine Paste Wax applied with Ultra Fine Steel Wool (0000), working with the grain of the wood. Allow to dry for 20 minutes, or until touch dry, and then buff with a clean cotton cloth or furniture brush, again working with the grain of the wood.

Filling nail holes, deep scratches, cracks and splits in wood

Many holes and scratches can be filled using Liberon Retouch Crayons. Simply rub the crayon across and along the hole until it is filled, then buff off the excess wax with a clean cotton cloth.

How to remove finger marks from the wood

Furniture that has had many years of spray polishing may become sticky and prone to finger marking. To remove the sticky polish and finger marks simply wash the surface with Wax and Polish Remover and Ultra Fine Steel Wool (0000), working with the grain of the wood, and wipe dry. If necessary repeat the process. Once the surface is clean it can then be waxed using Black Bison Paste Wax in clear.

Health and Safety

Black Bison Fine Paste Wax – Flammable. Wax and Polish Remover – Flammable, Harmful.
Ring Remover – Harmful.

Packaging

The kit contains Liberon Retouch Crayons (mixed), 150 ml Black Bison Fine Paste Wax, 125 ml Ring Remover, 250 ml Wax and Polish Remover and 4 x 7g Ultra Fine Steel Wool (0000).

Important: Always test products first on a spare or inconspicuous area to check compatibility and end results.